
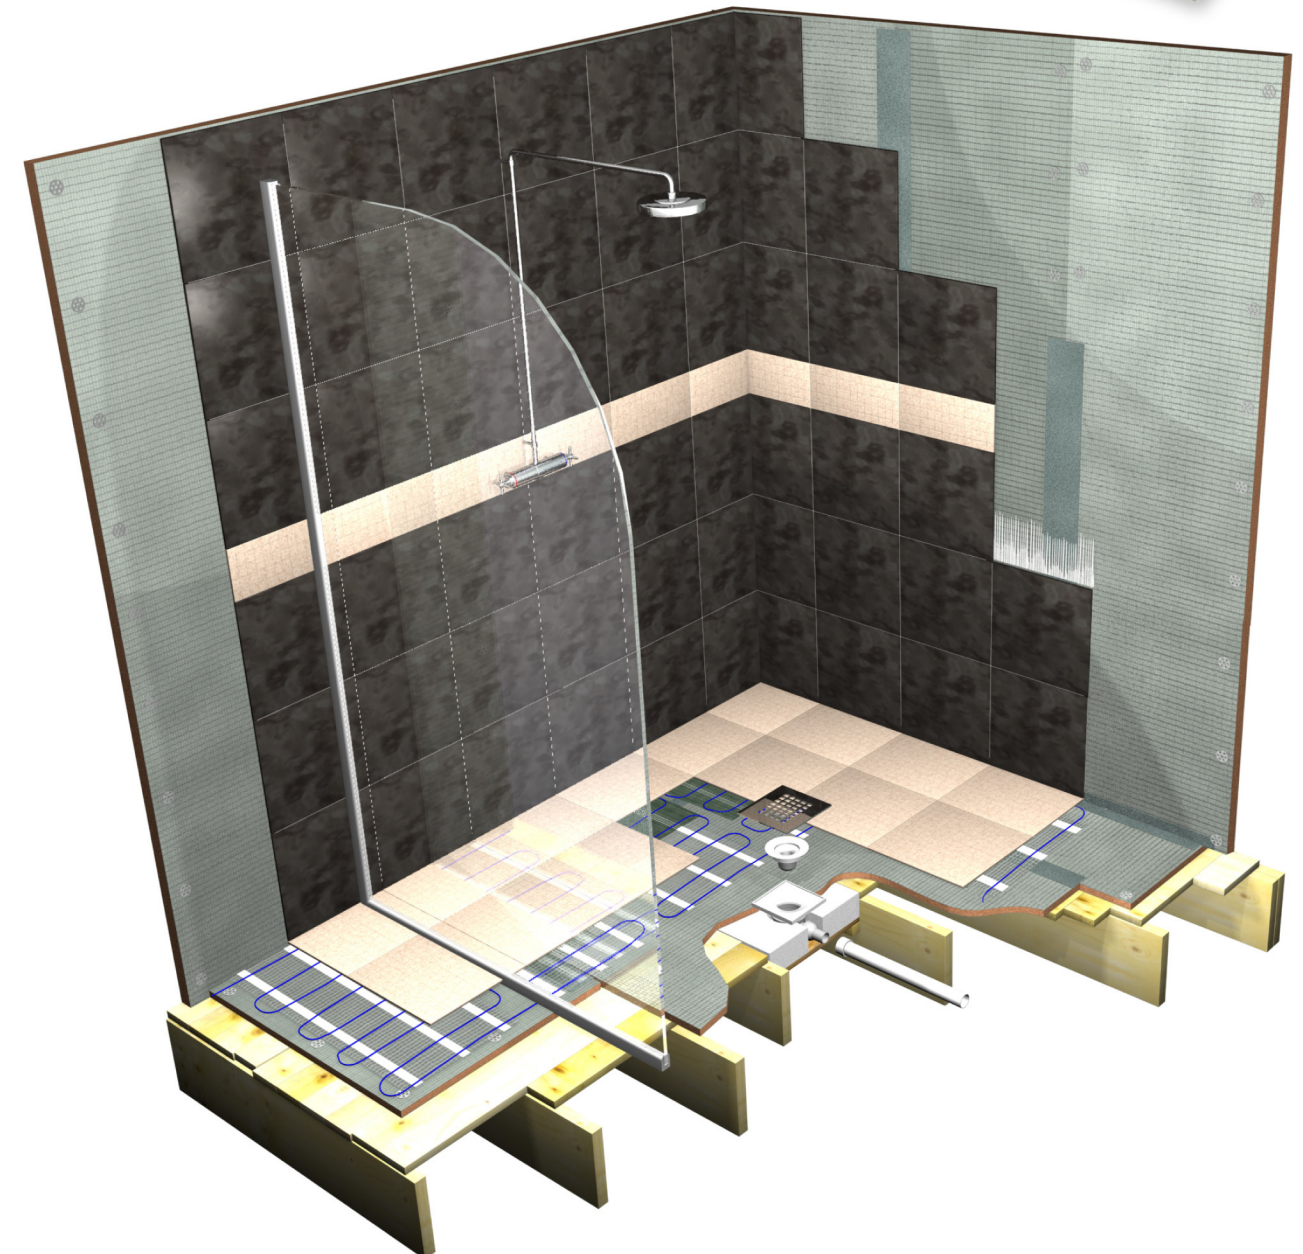


The information given above is given in good faith, however as we do not have knowledge of site conditions and the capability of the installer, we accept no liability for damage which may arise as a result of poor installation


SITE CONDITIONS CAN VARY AND MAY DICTATE DIFFERENT FIXING METHODS

Varme Wet Room


Varme Wet Room Trays have been designed for use with walk in shower enclosures, providing a tileable shower base, avoiding the need for the traditional "step-in" white acrylic base. It is a lightweight flush floor panel with pre-made falls to drain, and is coated with a cementitious layer ready for to receive a tiled surface.

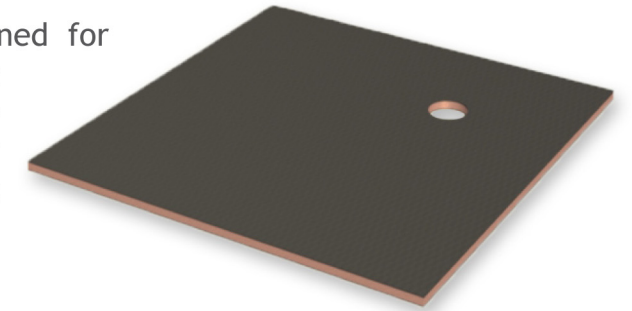


Flush to Floor Shower Tray

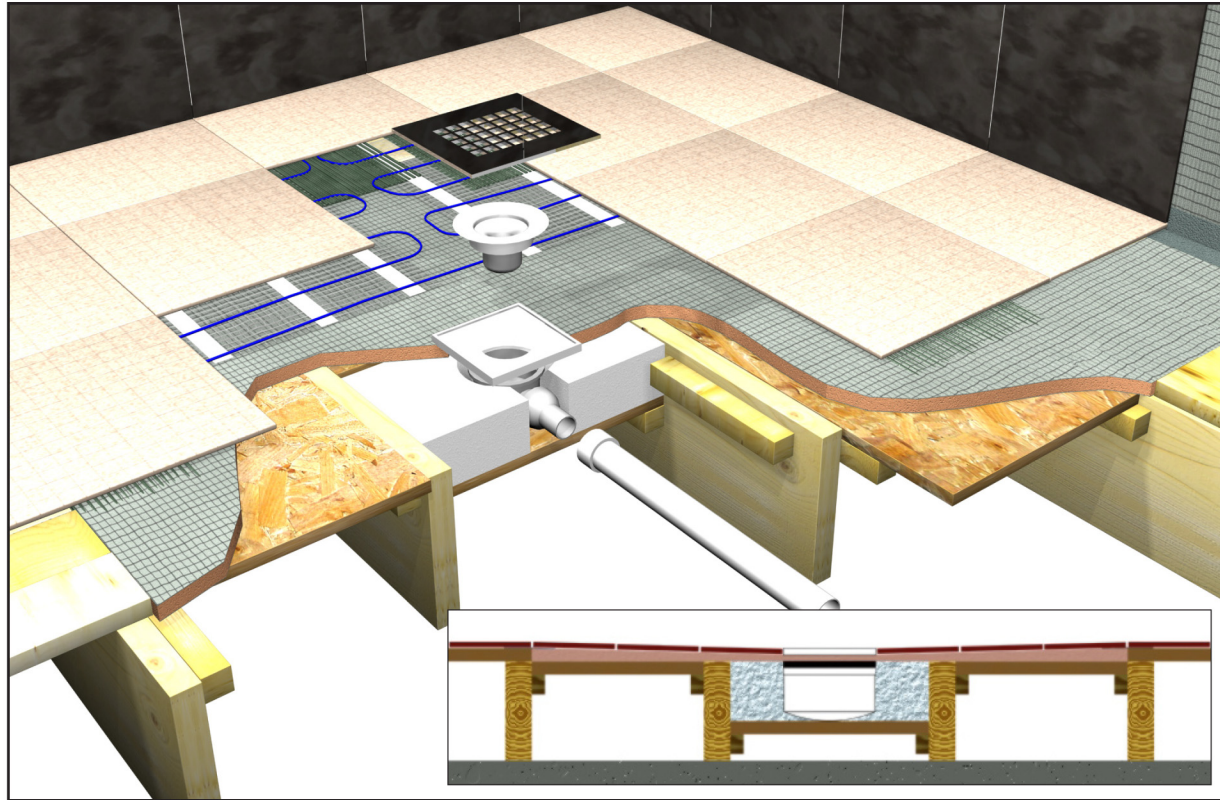


Floor Mounted Shower Tray

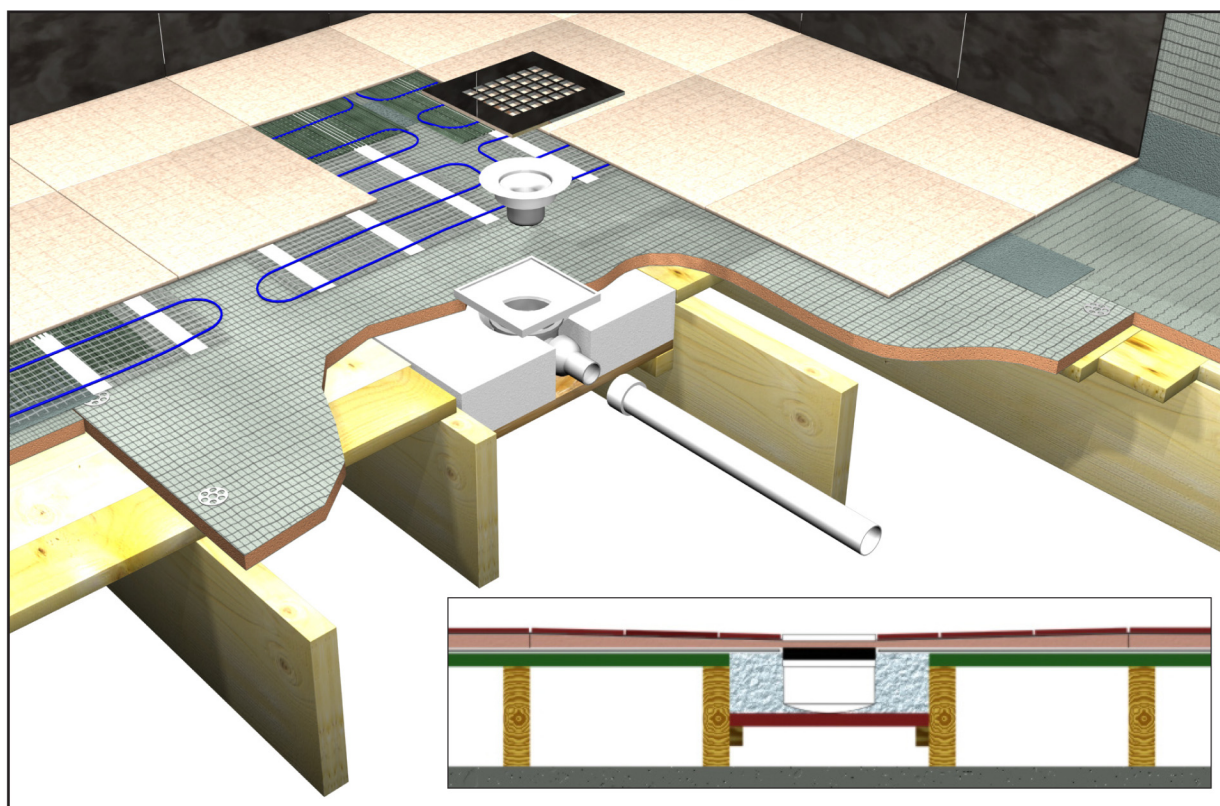


Stage 1

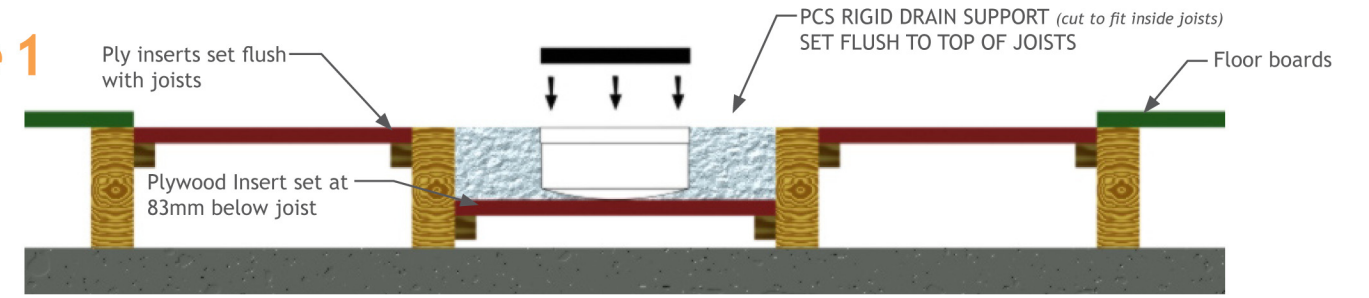


Stage 2

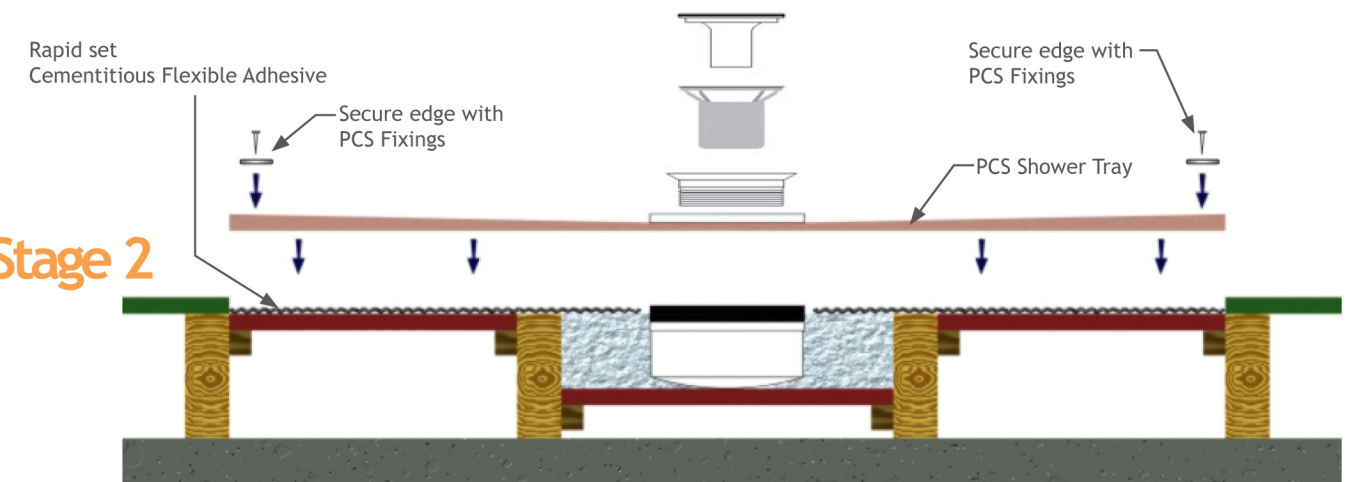

Stage 3

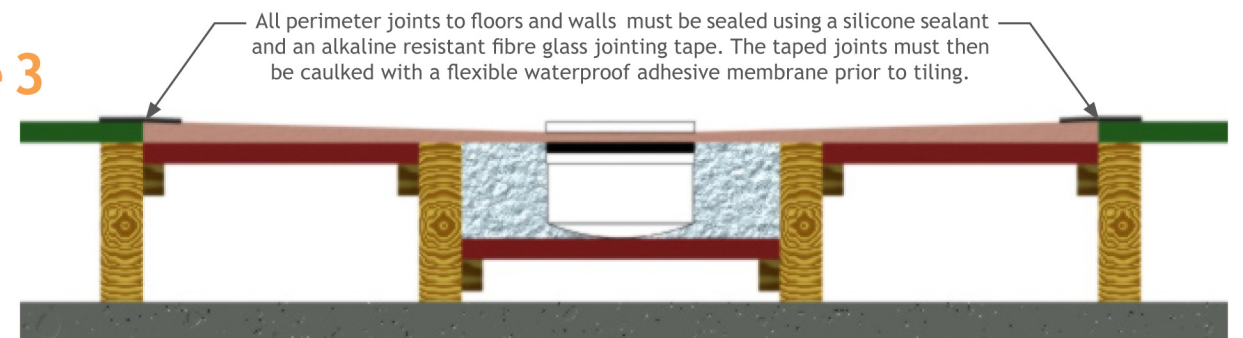

Stage 4

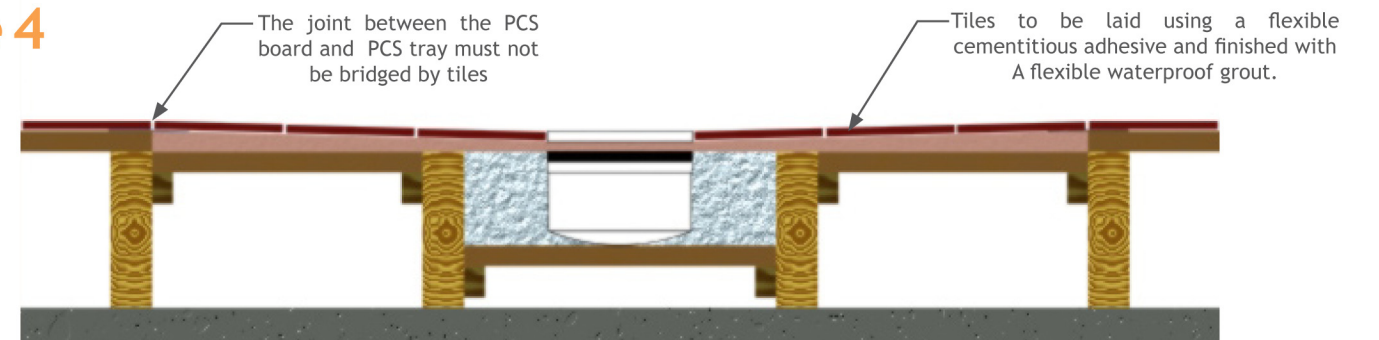

The information given above is given in good faith, however as we do not have knowledge of site conditions and the capability of the installer, we accept no liability for damage which may arise as a result of poor installation

SITE CONDITIONS CAN VARY AND MAY DICTATE DIFFERENT FIXING METHODS